

# ClearReader+ Voice Setup Manual

## A guide for Optelec distributors

(The list of available voices in software version 1.1.0)




The Optelec ClearReader+ product family features a maximum of four selectable voices. As standard the ClearReader+ units are delivered with the following voices:

STANDARD CONFIGURED VOICES ON THE CLEARREADER+ AND CLEARREADER+ BASIC		
European version (CR-BA-EU, CR-BA-EU-NB)	US/Canada version (CR-BA-US, CR-BA-US-NB)	Australian version (CR-BA-AU, CR-BA-AU-NB)
<ul style="list-style-type: none"> <li>▪ UK Serena – Default</li> <li>▪ German Anna</li> <li>▪ Dutch Xander</li> <li>▪ French Virginie</li> </ul>	<ul style="list-style-type: none"> <li>▪ US Samantha – Default</li> <li>▪ US Tom</li> <li>▪ Mexican Spanish Paulina</li> <li>▪ Canadian French Julie</li> </ul>	<ul style="list-style-type: none"> <li>▪ Australian Karen – Default</li> <li>▪ Australian Lee</li> <li>▪ UK Serena</li> <li>▪ UK Daniel</li> </ul>

If your market or your customer requires other voices than configured by default, you as a distributor can change the default voices by following the described steps.

**Step 1:** Press and hold the Back and Forward buttons followed by pressing the Play / Pause button and then release all buttons. You will enter the Voice Selection Mode. The ClearReader+ will announce a short instruction on the button functions.

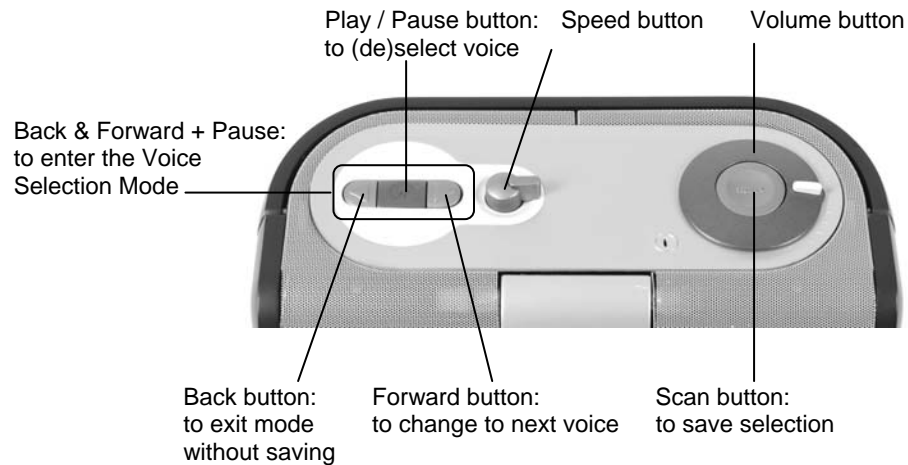

**Step 2:** Press the Forward button to navigate through the list of available voices.

	LANGUAGE	VOICE	GENDER
1	English (U.S.)	Jill	F(female)
2	English (U.S.)	Samantha	F
3	English (U.S.)	Tom	M(male)
4	English (British)	Daniel	M
5	English (British)	Serena	F
6	English (Australian)	Karen	F
7	English (Australian)	Lee	M
8	English (Indian)	Sangeeta	F
9	English (South African)	Tessa	F
10	German	Anna	F
11	German	Steffi	F
12	German	Yannick	M
13	French	Thomas	M
14	French	Virginie	F
15	French (Canadian)	Felix	M
16	French (Canadian)	Julie	F
17	Dutch (Belgian)	Ellen	F
18	Dutch	Claire	F
19	Dutch	Xander	M
20	Spanish (Mexican)	Javier	M
21	Spanish (Mexican)	Paulina	F

	LANGUAGE	VOICE	GEN
22	Spanish (Castilian)	Diego	M
23	Spanish (Castilian)	Monica	F
24	Catalan	Nuria	F
25	Czech	Zuzana	F
26	Danish	Ida	F
27	Finnish	Mikko	M
28	Greek	Alexandros	M
29	Hungarian	Eszter	F
30	Italian	Paolo	M
31	Italian	Silvia	F
32	Norwegian	Stine	F
33	Polish	Agata	F
34	Portuguese	Joana	F
35	Portuguese (Brazilian)	Raquel	F
36	Romanian	Simona	F
37	Russian	Milena	F
38	Slovak	Laura	F
39	Swedish	Alva	F
40	Swedish	Oskar	M
41	Turkish	Aylin	F
42	English (Irish)	Moira	F

**Step 3:** After the requested voice has been announced press the Play / Pause button to select it. Then press the Forward button to proceed further in the list and select up to 4 voices in the same way.

**Step 4 a:** If you have selected all requested voices, save your voice selection by pressing the Scan button. The selected voices will be saved and the voice selection mode will be closed.

**Step 4 b:** If you want to exit the Voice Selection Mode without saving the changes, press the Back button.

**Step 5:** Verify if the configuration was successful. Cycle through the selected voices by pressing and holding the Back button while turning the speed dial at the same time. *Please note that each time you re-configure the ClearReader+ all voices need to be selected. Adding or removing only one voice is not possible.*